

CUSTOM KITCHEN CABINET & REFACING

98 Monarch Drive
Amherst, New York 14226
Phone (716) 832-9737
Fax (716) 832-9294
Orders (888) 40 REFACE toll free

How to Order and Measure

Order *exact* overall door sizes. Please do not order by opening sizes

- ◆ Select **WOOD TYPE**.
- ◆ Select **DOOR DESIGN**.
- ◆ Select **EDGE PROFILE**. Doors or drawer fronts ordered without edge profile will be shipped rough-cut on edges and 1/8" larger than sizes ordered. All four sides will be edged the same unless otherwise indicated. For doors or drawer fronts ordered with more than one edge profile, add 50 cents per square foot.
- ◆ Indicate **APPLIED MOLDING** if desired by adding W/M to Design Number.
- ◆ Determine **DOOR AND DRAWER FRONT SIZES**. Order by giving exact overall door or drawer front sizes. Below are recommended dimension allowances. A different amount may be needed where a special fit is required.
 - For edge profiles 101, 121, or 122, add 1/2" to opening height and width.
 - For all other edge profiles, add 1" to the height and width.
- ◆ Check for **MINIMUM SIZE PROBLEMS**. Some doors over 26" in width and/or 46" in height will have double panels.
- ◆ **MAXIMUM GUARANTEED SIZES**: Doors 23" wide and/or 46" high; Drawer Fronts 30" wide and/or 12" high.

How to Price

- ◆ **DETERMINE SQUARE FOOTAGE** by multiplying exact door/drawer front width times the height and dividing by 144 (round off to the nearest 100th), i.e. $12\frac{1}{2} \times 27\frac{3}{4}$ Door = $(12.5 \times 27.75) / 144 = 2.41$ sq. ft.
- ◆ **MULTIPLY SQUARE FEET BY SQUARE FOOT PRICE**; i.e. Red Oak # 800 2.41 sq. ft. x \$8.20 = \$19.76

FRAME-ONLY DOORS:

USE 9" FOR WIDTH X ACTUAL HEIGHT REGARDLESS OF ACTUAL WIDTH TO FIGURE SQUARE FOOTAGE.

Standard Door Specifications


TOLERANCES

Width: + or - 1/16"
Height: + or - 1/16"
Thickness: + or - 1/32"

FRAMELESS & FULL
OVERLAY APPLICATIONS
See page 17

SANDING

Face: 220x Panel Profile: 180x
Back: 180x Edge profile: 180x

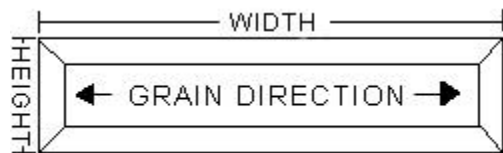

DRAWER FRONT

